


CUMU

INSTALLATION MANUAL

CMD-L100

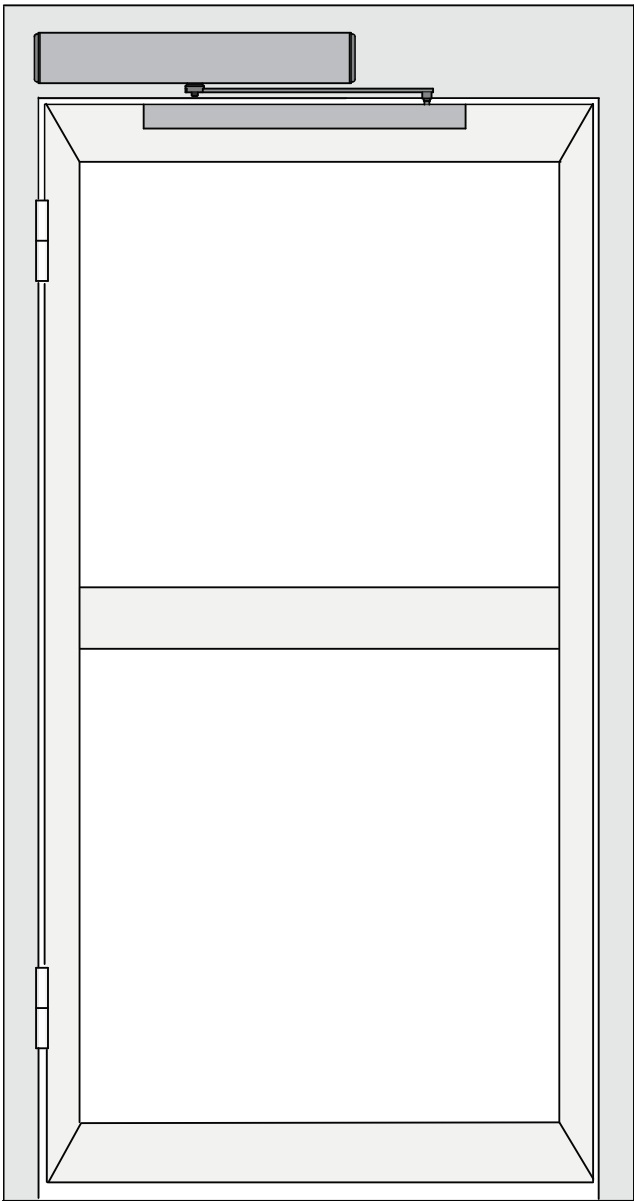

AUTOMATIC ENTRANCE SPECIALISTS

CUMU AUTOMATIC DOOR (CHANGZHOU) CO., LTD.



Contents

- 1 Technical Parameters..... 1
- 2 Components..... 2
- 3 Installation 3-10
 - 3.1 Installation Example 3
 - 3.2 Installation of base plate 4-5
 - 3.3 Installation of pull arm 6
 - 3.4 Installation of push arm 7-8
 - 3.5 Installation of operation system..... 9
 - 3.6 Installation of cover 9
 - 3.7 Connection of operation system and pull arm..... 10
 - 3.8 Connection of operation system and push arm..... 10
- 4 Electrical connection..... 11-13
- 5 Parameters adjustment 14


1 Technical Parameters

Voltage: 220~240V ±10%
Opening time: 3~7s / 90°
Hold open time: 1~30s adjustable
Door width: Min. 660mm / Max. 1300mm
Max. opening angle:105°
Environment Temperature: -20℃~+50℃
Protection class: IP12D
Product weight: 6.5 Kg
Dimension: L515×H95×W90mm

mm=Door width
kg=Door weight

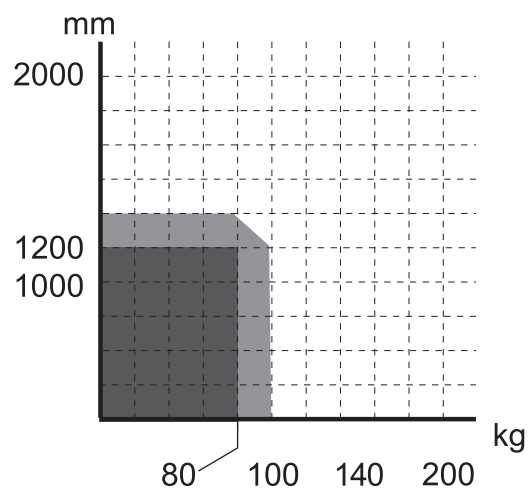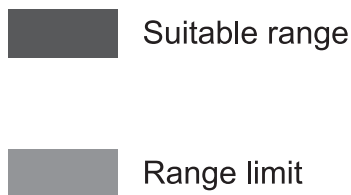


2.Components

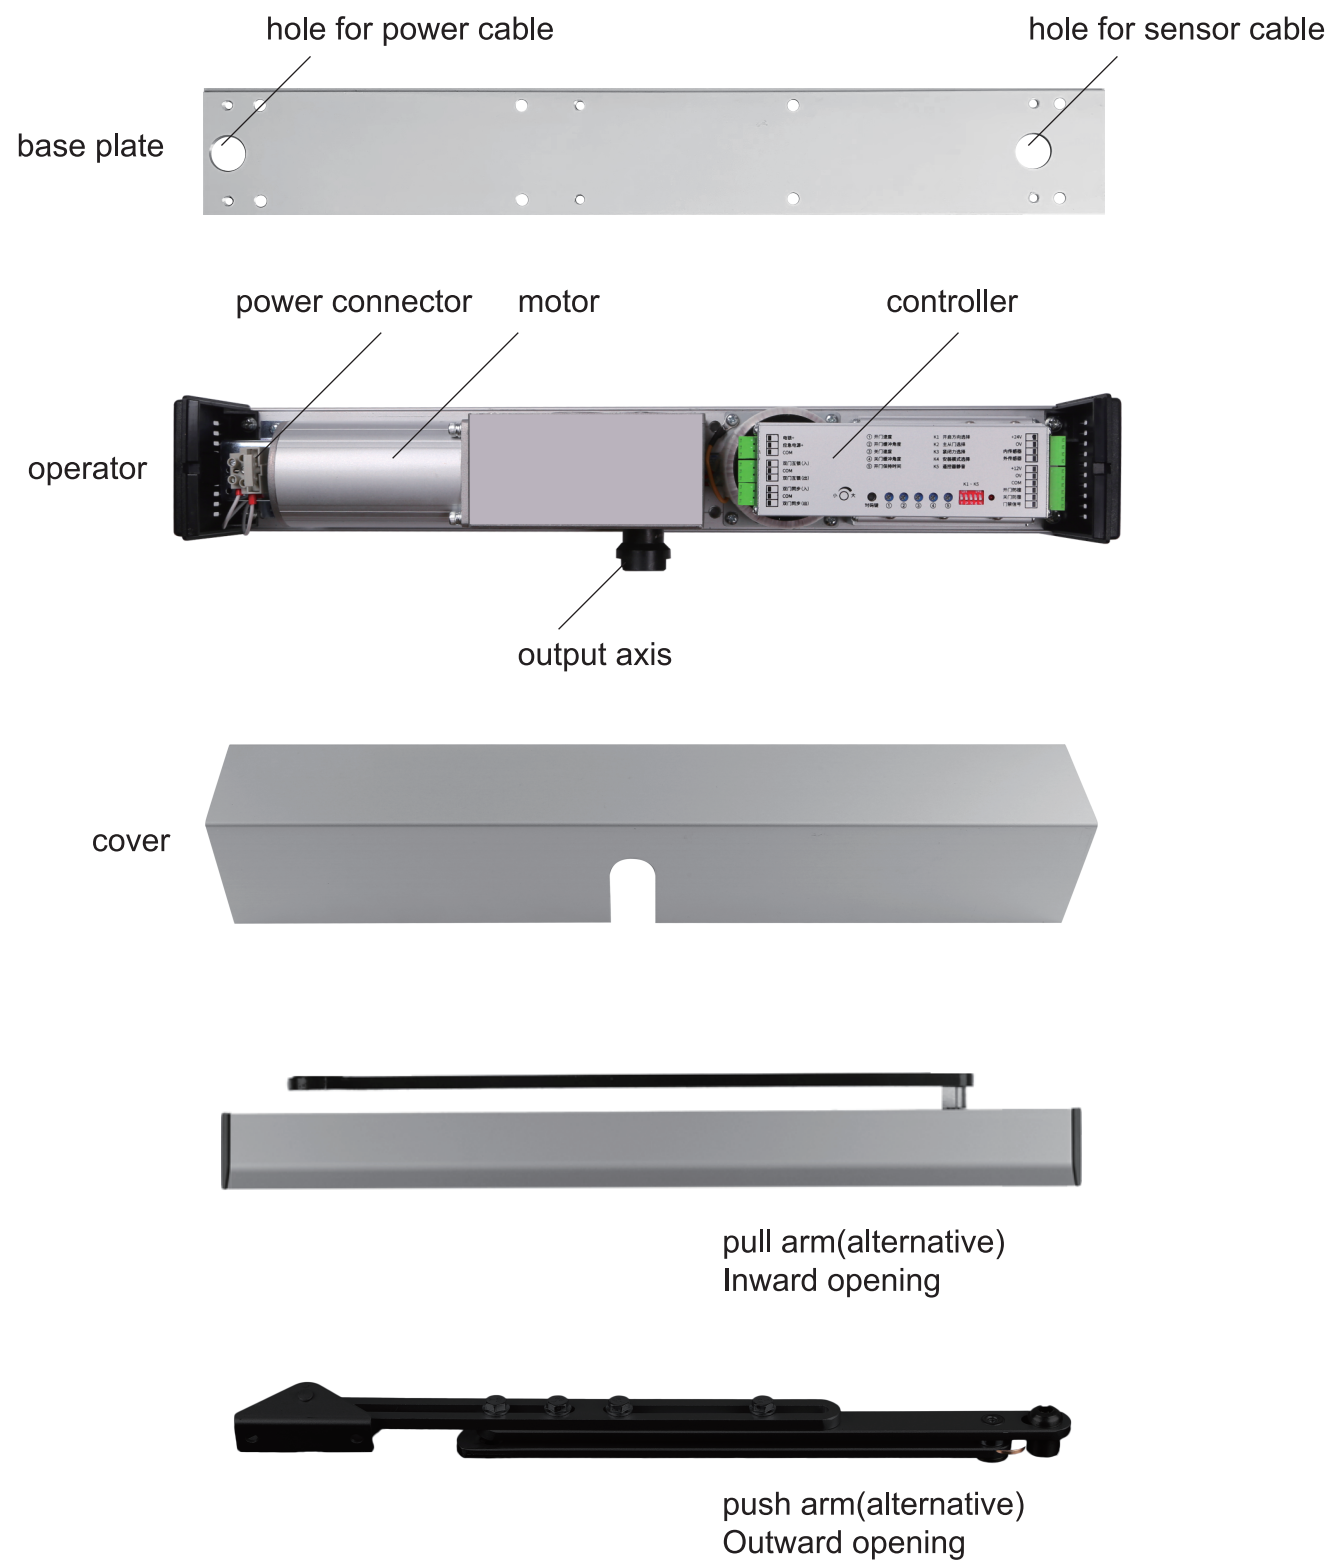


3 Installation

3.1 Installation example


Choose pull arm: door leaf open toward inside (operator is inside)

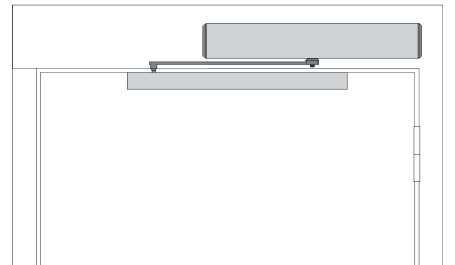


Door leaf $W \geq 700\text{mm}$
Door leaf flat with wall face

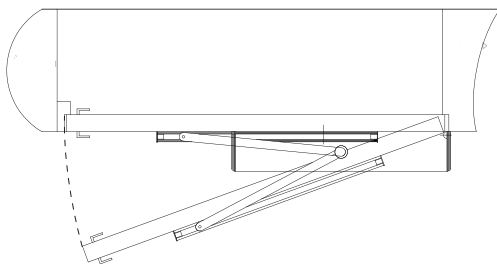

Choose push arm: door leaf open toward outside (operator is inside)

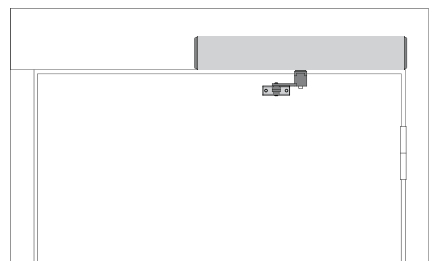


Door leaf $W \geq 550\text{mm}$
Wall depth minus door leaf thickness $\leq 180\text{mm}$

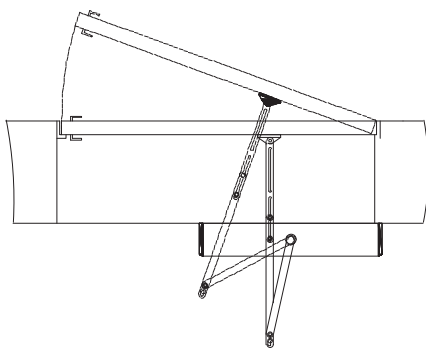

3 Installation


3.2 Installation of base plate

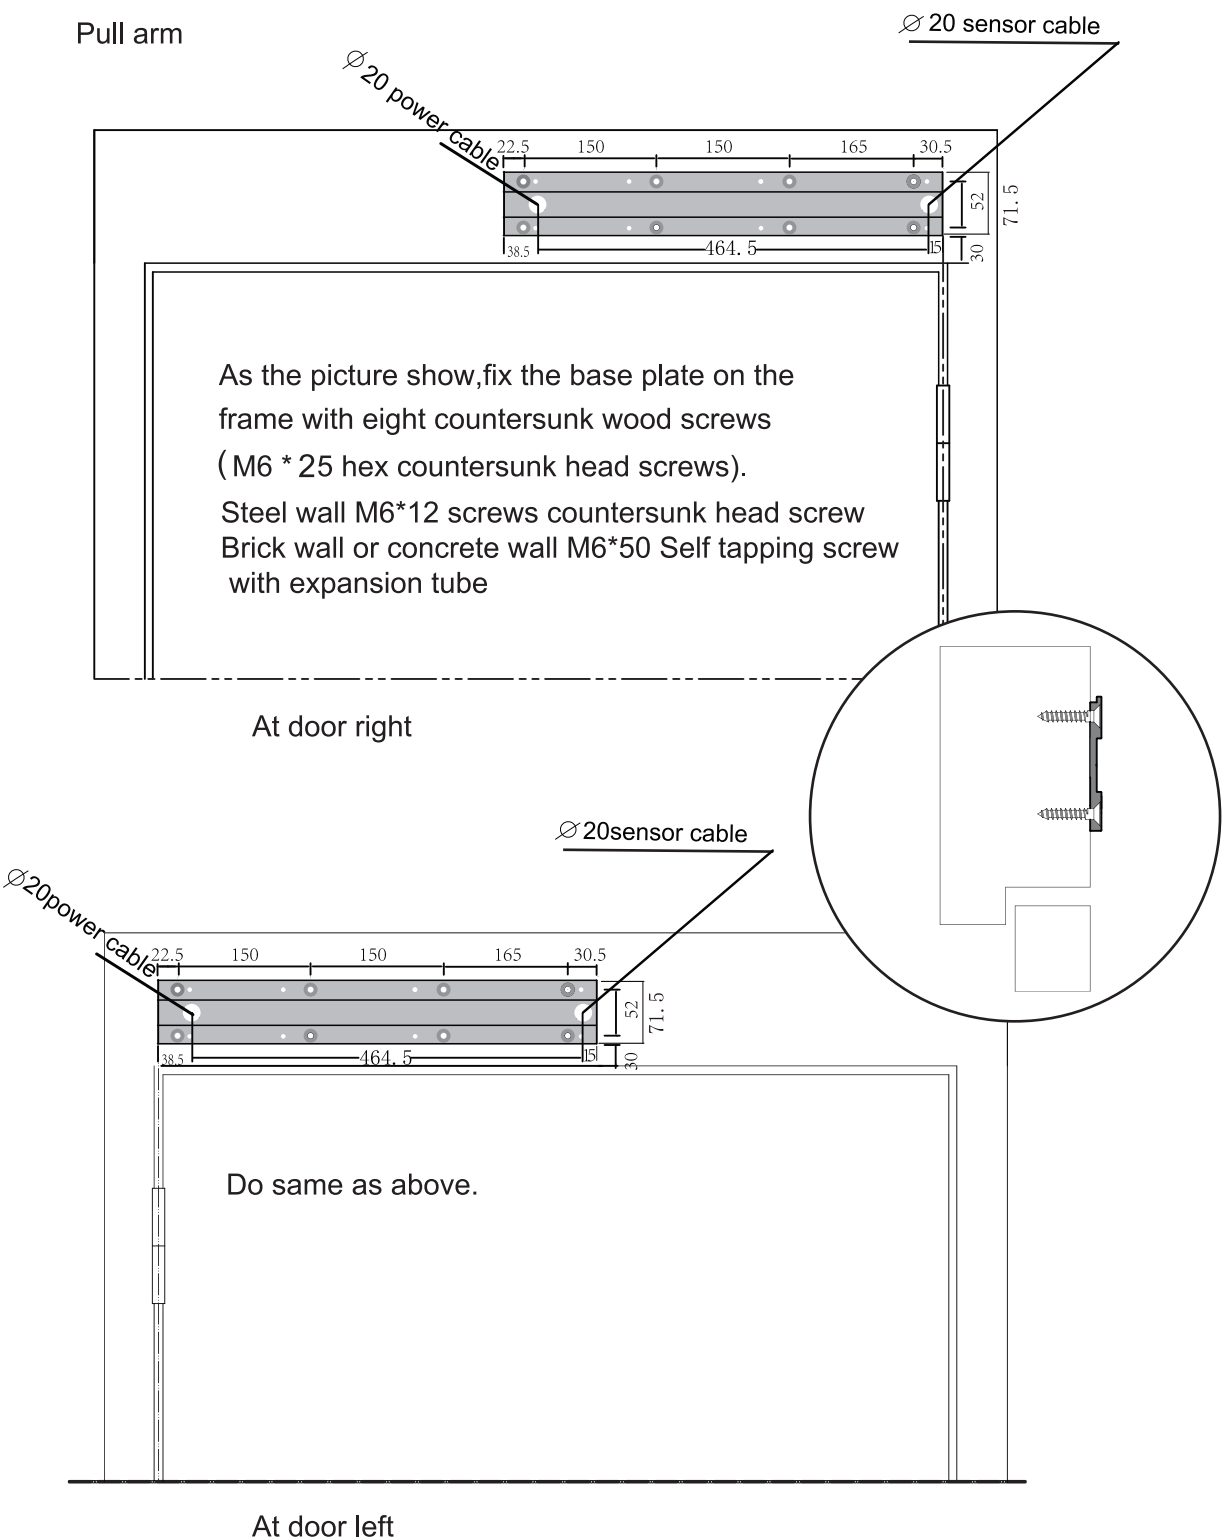


3 Installation

3.2 Installation of base plate

Push arm

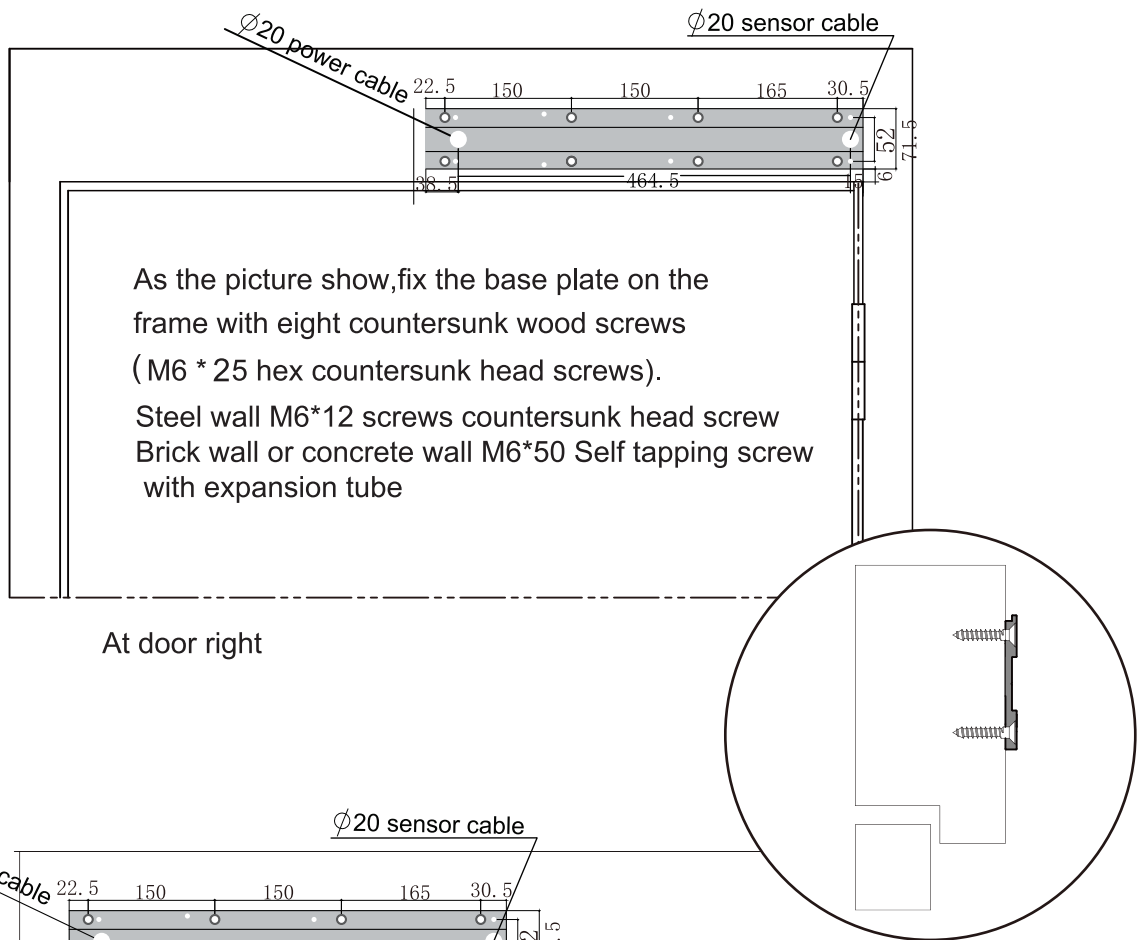



At door right

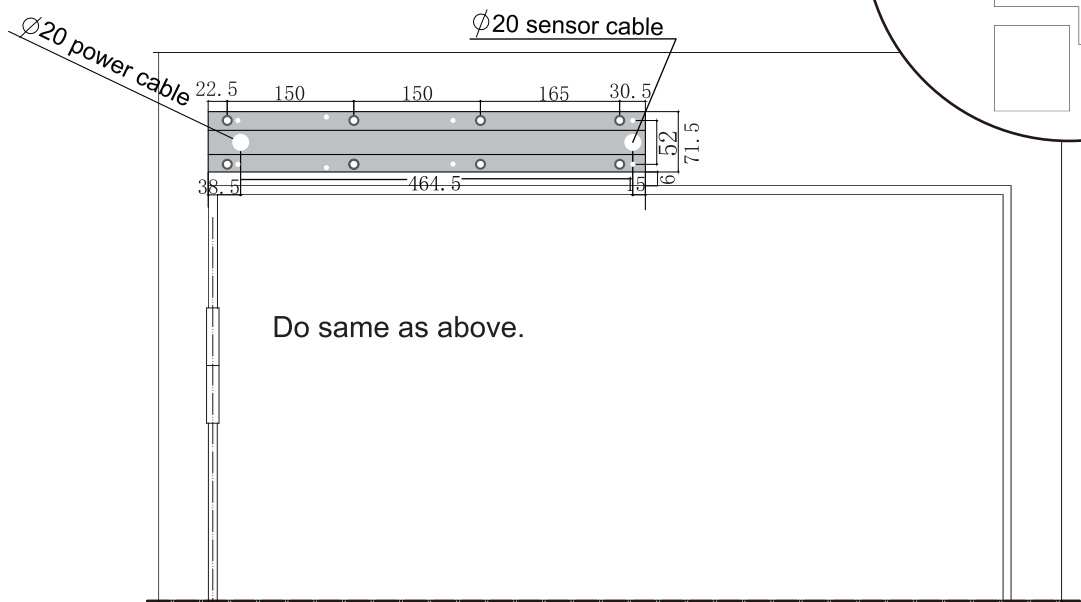

At door left


3 Installation

3.3 Pull arm

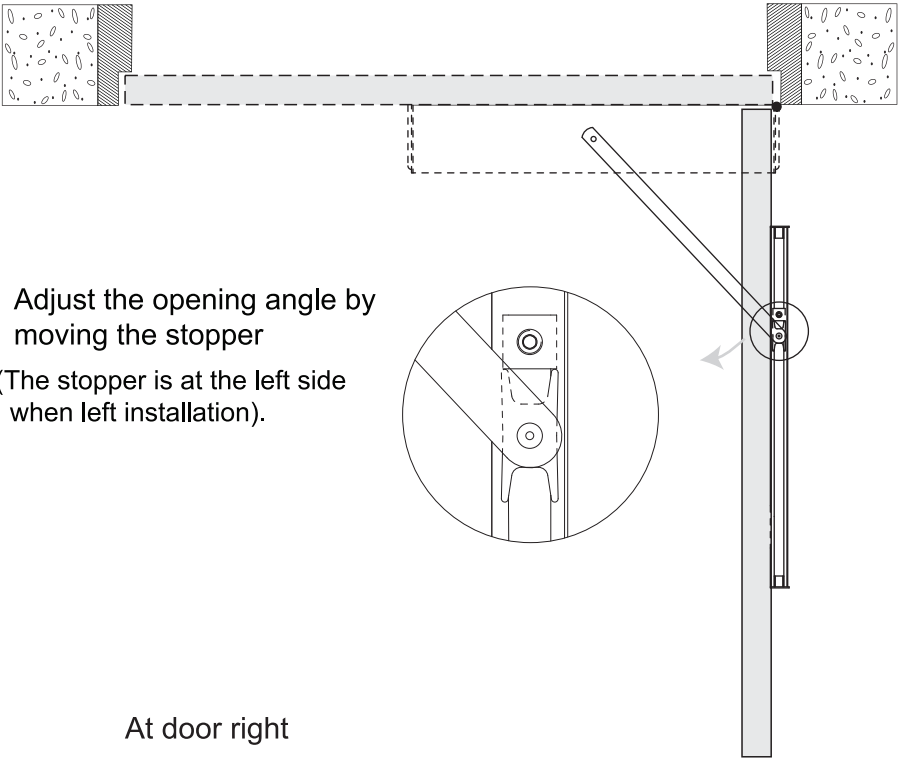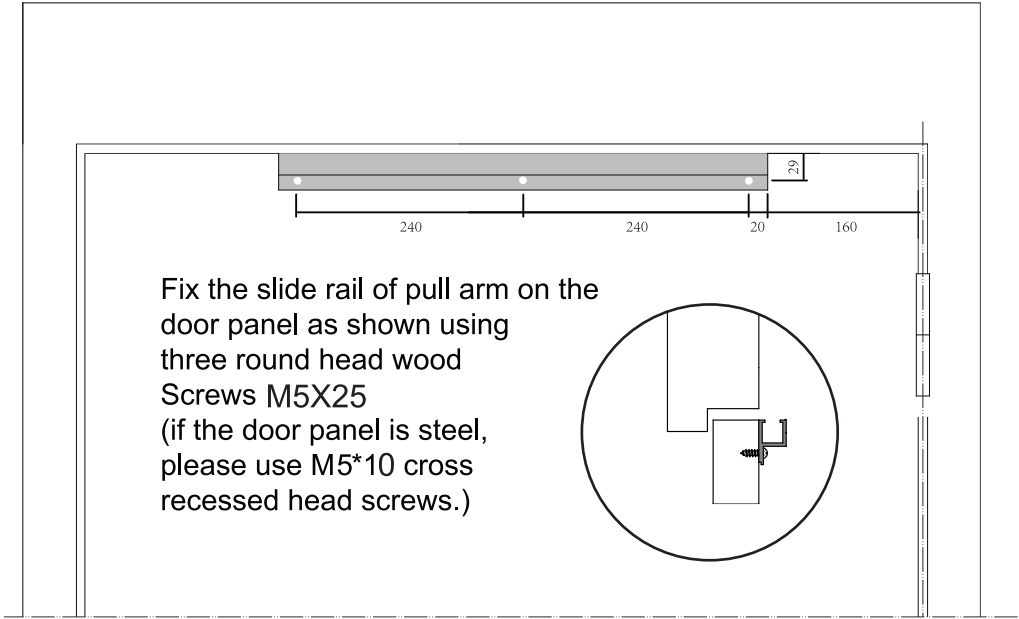

3 Installation

3.4 Push arm

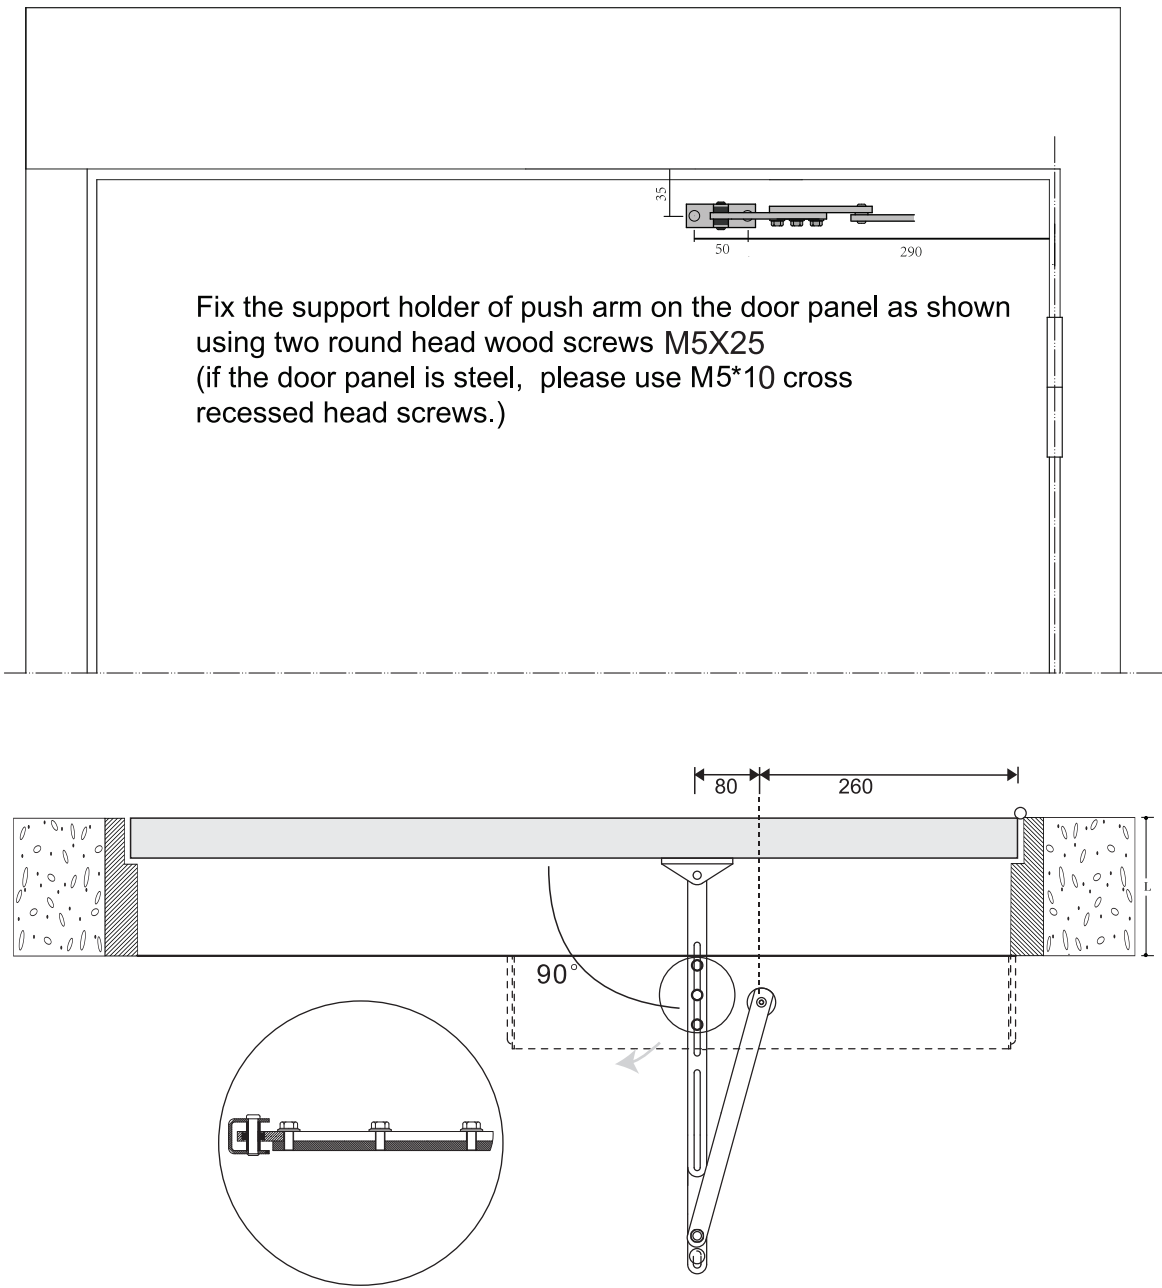


Loosen this three bolts and adjust the push arm length according to the door depth(L) until the angle between the push arm and door panel is 90° .

At door right


3 Installation

3.4 Push arm

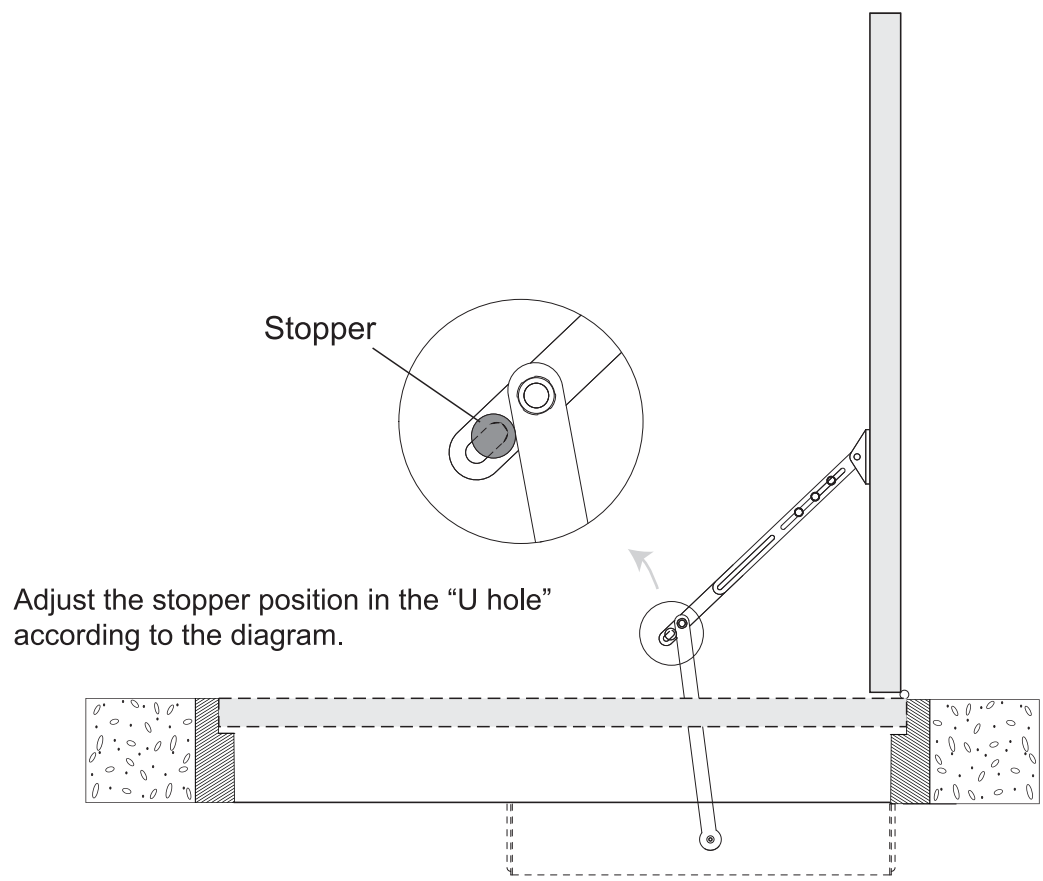


3 Installation

3.5 operation system

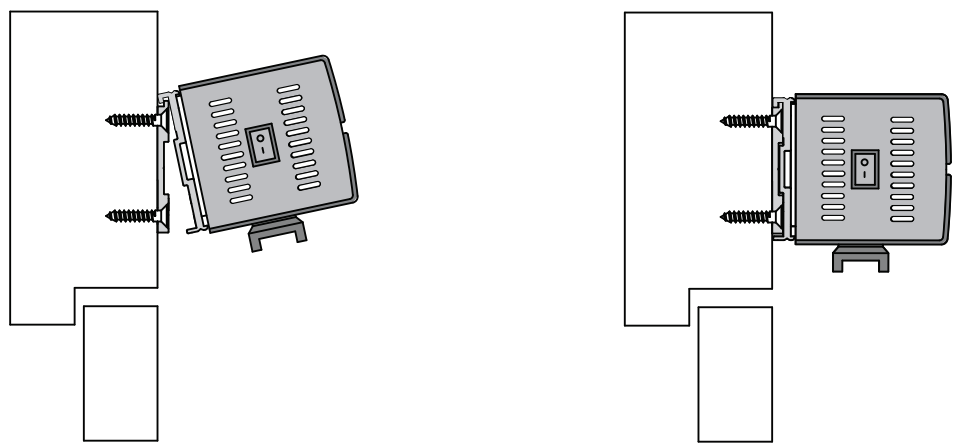


Hook the operation system on the finished base plate as shown, fix it with eight hexagon socket head screws.

3.6 Cover

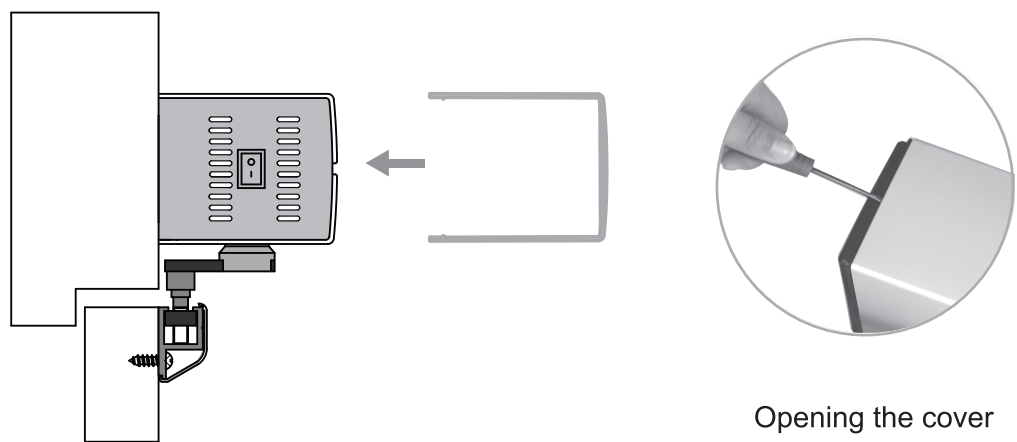


3 Installation


3.7 Connect the operation system and the pull arm

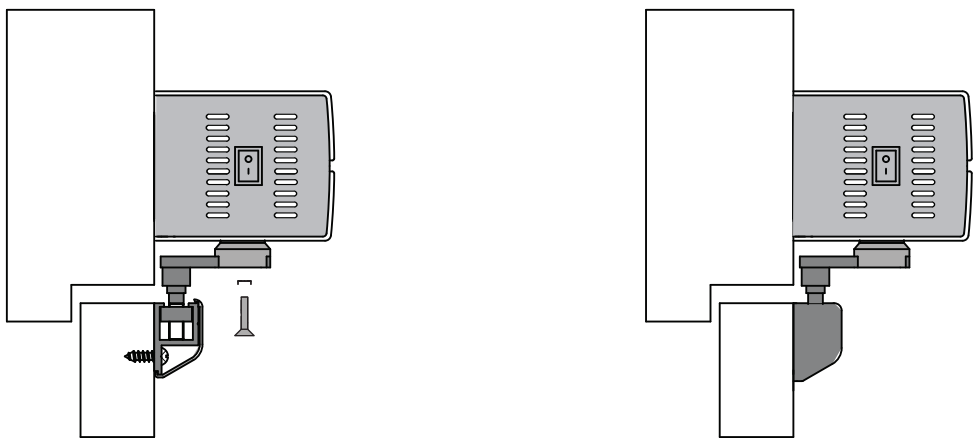

3.8 Connect the operation system and the push arm

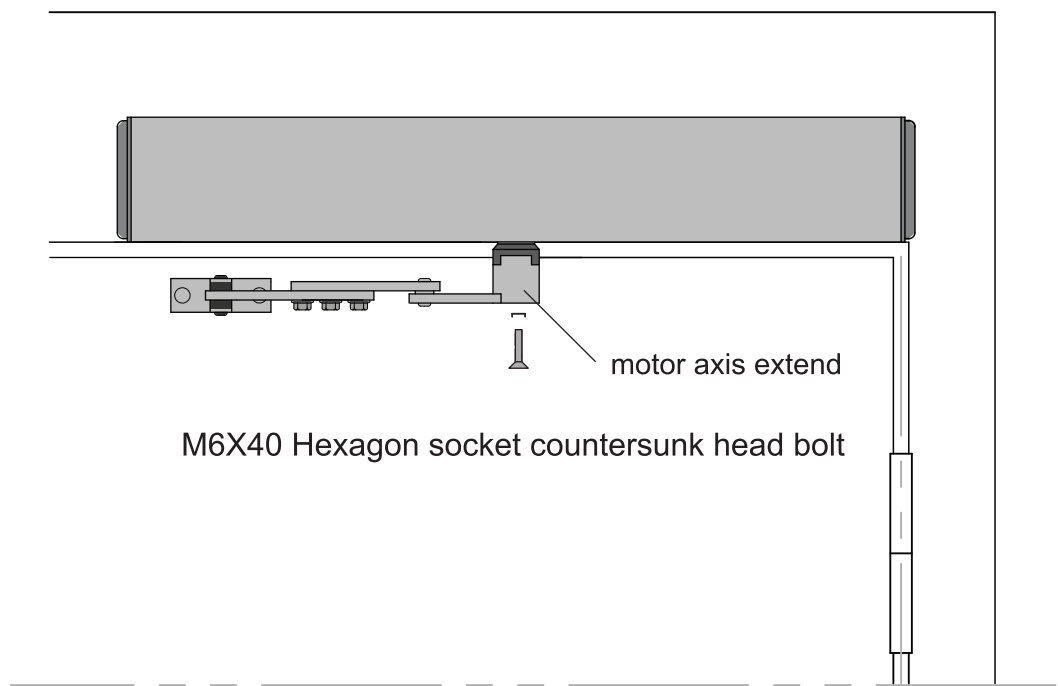


4.Electrical connection

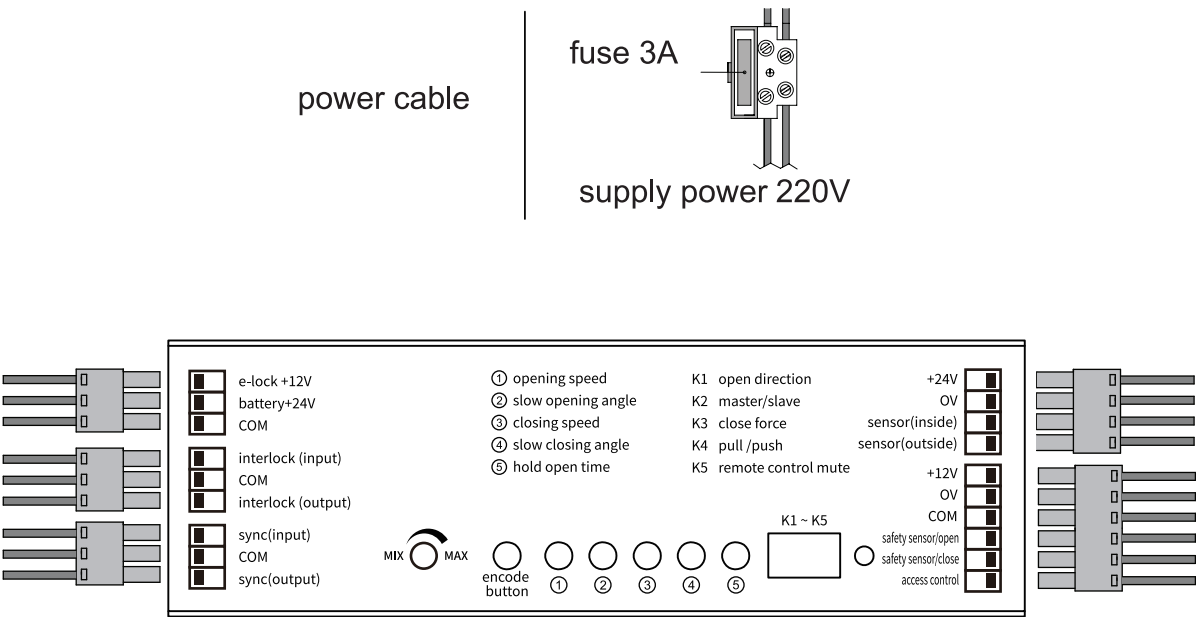


Electric lock


Electric lock(Automatic lock)

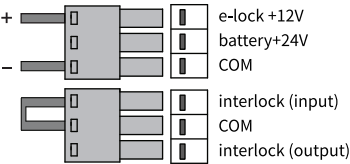


Electric lock(Remotae control lock)




Access control

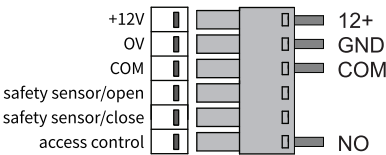

Sensor




sensor(inside)




sensor(outside)


4.Electrical connection

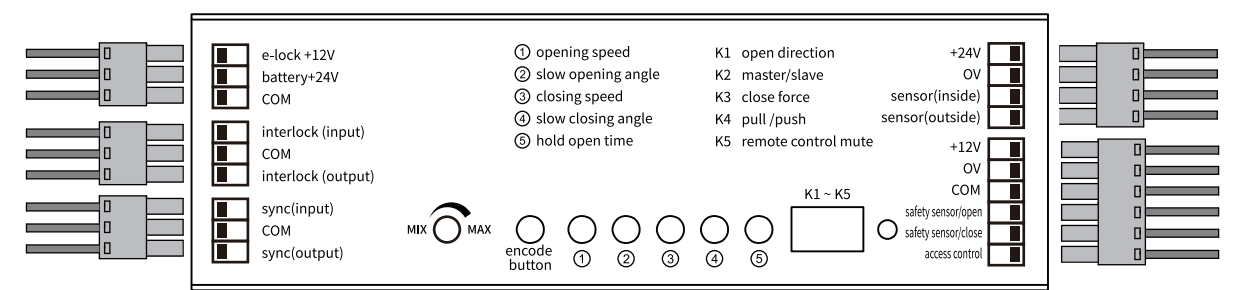

Safety

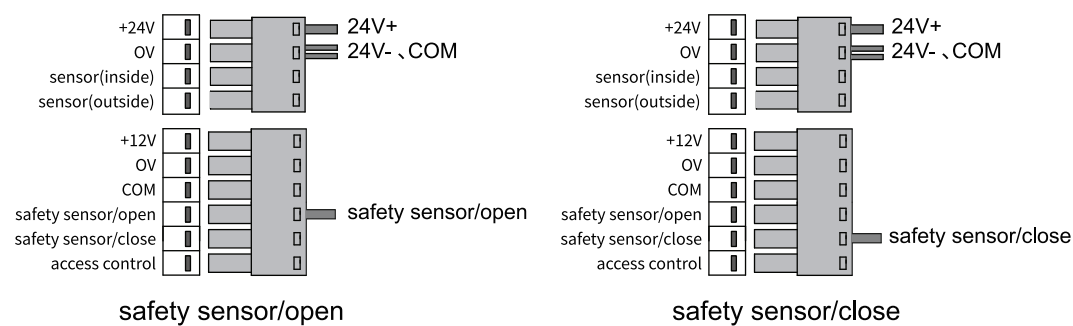

battery



Double-door synchronous




*When double opening, open first and close second is master door, close first and open second is slave door; Master door turn K2 down, slave door turn K2 up.
*Sensors and access control system are connected with the master door controller.

Interlock



Note: Two doors share same sensor or same signal source, both doors may hold open, in this case, exchange two signal wires of the sensor which is connected with the same controller, it doesn't matter controller A or B.

4.Electrical connection

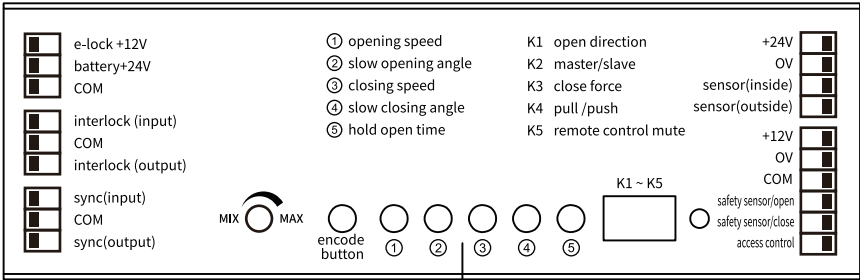


- 1.opening speed turn clockwise, speed increase
- 2.slow opening angle turn clockwise, angle bigger
- 3.closing speed turn clockwise, speed increase
- 4.slow closing angle turn clockwise, angle bigger
- 5.hold open time turn clockwise, time longer

1. Set the DIP switch(K1-K5): after setting, power off and restart.

- K1: Set opening direction: power on, the door goes to closing direction, if not,change the switch position.
- K2: Set master/slave door: when double-door synchronous, master door turn K2 down (OFF), slave door turn K2 up(ON).
- K3: Choose pull arm or push arm: pull arm, turn K3 down(OFF), push arm, turn K3 up (ON),
- K4: Set closing force: no closing force, turn K3 down(OFF), want closing force, turn K4 up (ON).
- K5: Remote control mute selection: Remote control mute,turn K5 down(OFF)

4.Electrical connection

Optional: remote control

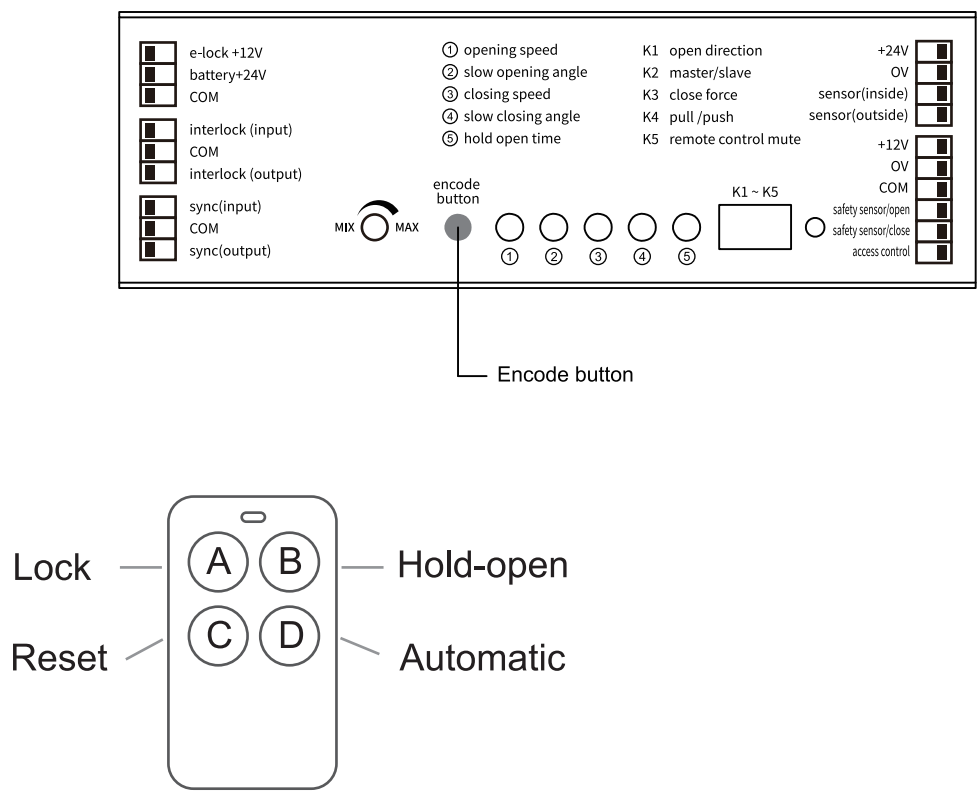

Encode remote control with the door controller :

- 1.Delete all: long press the button “Encode” until the sound of buzzer disappears, loosen the button.
 - 2.Encoding: long press the button “Encode”, the buzzer sounds. Then press any button of the remote control, the buzzer stops sounding which means encoding successfully.
- When use the remote control, the buzzer sounds for 2 seconds.
- 3.Press button “automatic” one time, the door will open and close one time.

One controller can be connected with remote control not more than 10pcs .

CONTACT US

 NO. 6 BEITANG RIVER EAST ROAD, TIANNING DISTRICT, CHANGZHOU CITY, JIANGSU PROVINCE, CHINA

 +86-400-088-6108

 CUMU@CMZDM.COM.CN

 WWW.CMZDM.COM.CN